



*American Standard*

# MASSAGE CONTROL CONFIGURATIONS

## WHIRLPOOL SYSTEM

- Without Lights



- With Lights



## AIR SPA SYSTEM

- Without Lights



- With Lights



## COMBO SYSTEM

- Without Lights



- With Lights





# MESSAGE INSTRUCTIONS



## JET MASSAGE CONTROL

*For Whirlpool Systems*

This function turns the whirlpool system on and off. Press the button once to activate the whirlpool system and once to turn the system off.



## JET MASSAGE PUMP SPEED CONTROL

*For Whirlpool Systems*

This function is used with the ON/OFF button to vary the speed of the pump between Hi, Medium and Low. When the ON/OFF button is activated you can turn the dial to one of the above setting to adjust the flow rate of the water.



## AIR MESSAGE/LIGHTS CONTROL

*For Air Spa Systems, Whirlpool Systems With Lights, and Air Spa Systems With Lights*

This function is used to turn on and vary the flow rate of the air system. Push the button once to activate in Hi and again for Medium, Low, Wave and Off. If your whirlpool or air spa system is equipped with lights, a similar button will control the lights.



## JET MASSAGE CONTROL

*For Combo Systems With Lights*

This function operates the whirlpool system in combo massage system tubs. Press the button on the left side to turn the tub jets ON and OFF. To change the strength of the jets, press the button on the right side and let the pressure of the jets change. Once you have reached the desired water pressure, press the button again to set the jets. A green light will come on to indicate the jets have been set. The jets will remain at that setting, even after the system has been turned off.

*American Standard*

